

1. Disable Error 3 and 5

- From any measuring screen (fig 1) press **F3** (Menu) The Select Menu screen appears (Fig 2)
- Use **F4** (up) or **F5** (down) to highlight "system setup" option, Press F3 (select) the System Setup screen appears (Fig3).

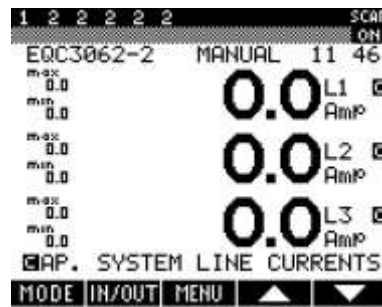


Fig 1: Measuring screen

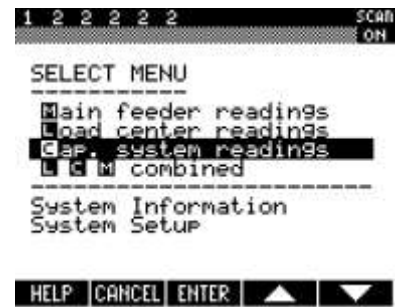


Fig 2: System Setup screen

- Use F4 to highlight "site installation" option (fig 3), Press F3 (Enter) the System Structure screen appears (Fig 4).



Fig 3: System Setup screen

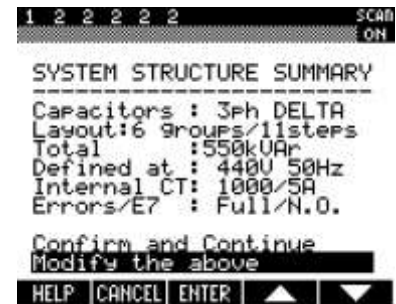


Fig 4: System Structure screen

- Use F4 or F5 to highlight "modify the above" option (fig 4), Press F3 (Enter).
- Press F3 (Enter) number of times until the Error detection screen appears (fig 5).
- Use F4 or F5 to highlight "Customize" option (fig 5)
- Press F3 (Next) the warning screen will appear (fig 6), press F3 (next), the Error detection screen appears again (fig 5).

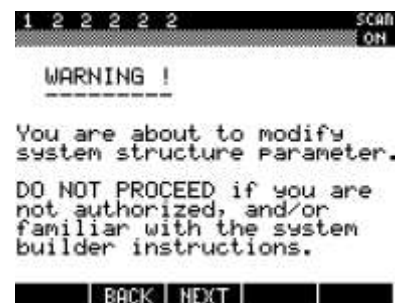
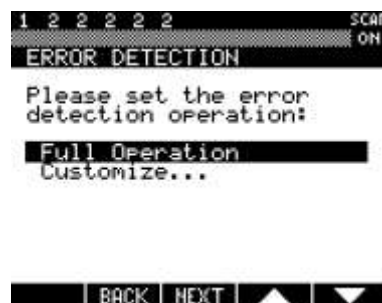


Fig 5: Error Detection screen

Fig 6: Warning screen

- Use F4 or F5 to highlight “Customize” option, Press F3 (Enter), the “Error detection settings” screen appears (fig 7).
- Use F4 or F5 to highlight “E3 Unable to connect” option (fig 7), Press F3 (Enter) the unable to connect (E3) screen will appear (fig 8).
- Repeat this for “E5 misfiring Error”



Fig 7: Error Detection Settings screen



Fig 8: Unable To Connect (E3) screen

2. Check capacitors currents and KVAR

- From any measuring screen (fig 1) press **F1** (Mode) the Select Operation Screen (Fig 9) will appear.
- Use **F4** (up) or **F5** (down) to highlight “Manual” option, Press F3 (select) the Manual Mode Measuring screen (Fig 10) appears.
- Press F2 (in/out) and F4 (in) to connect a group that indicated Error 3 (fig 10).

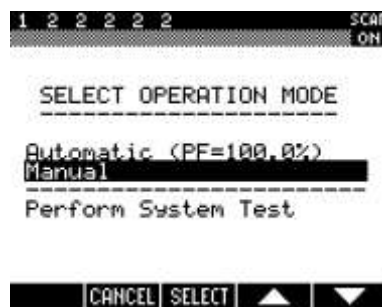


Fig 9: Select Operation Mode screen

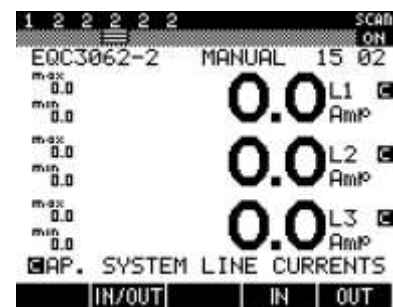


Fig 10: Manual Mode Measuring screen

- Press F3 (Menu), use F4 or F5 to select “cap system readings” option (fig 11) Press F3 (Enter), the main menu screen appears (fig 12).
- Press F4 or F5 to chose “Line Currents”, press F3 (Enter), **read the currents in this group.**

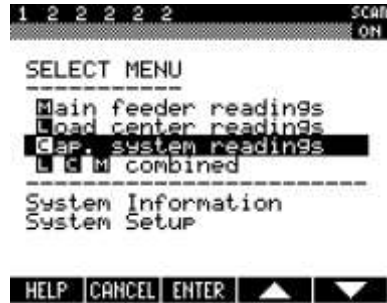


Fig 11: Select Menu screen



Fig 12: Main Menu screen

- Press F3 (Menu), use F4 or F5 to select “cap system readings” option (fig xx)
Press F3 (Enter), the main menu screen appears (fig xx).
- Press F4 or F5 to chose “KVAR Meters”, press F3 (Enter), **read the KVAR values in this group.**