

How to View the events log

1. From any measuring screen Press F3 MENU.
2. Use F4, F5 arrows to highlight system information and press F3 ENTER.

```

≡ ≡ ≡                               SCAN
-----                               ON
EQC3031-2U  MANUAL  14:19
max 0.0K          0.0 SUM
min 0.0K          0.0 kVA
max 0.0K          0.0 SUM
min 0.0K          0.0 kW
max 1.000C       1.000 SUM
min 1.000C       1.000 CAP
LOAD CENTER POWER TOTALS
MODE IN/OUT MENU  ▲ ▼
  
```

1

```

≡ ≡ ≡                               SCAN
-----                               ON
SELECT MENU
-----
Main feeder readings
Load center readings
Cap. system readings
  combined
-----
System Information
System Setup
HELP CANCEL ENTER  ▲ ▼
  
```

2

3. Use arrows to highlight Events and press ENTER.
4. Chose new events for events that had not been watched yet r old events for events that have been already watched and press ENTER.

```

≡ ≡ ≡                               SCAN
-----                               ON
SYSTEM INFORMATION
Model          EQC3031-2U
Serial Number  50E78584B
Firmware Ver.  3.5.7 D2CA
Loader Ver.    1.6
Alarm Status   ON
Communication  ELCOM
Group Status   N/A
Events        848(New)
CANCEL ENTER  ▲ ▼
  
```

3

```

≡ ≡ ≡                               SCAN
-----                               ON
SUMMARY OF EVENTS
-----
New Events    848
Old Events    0
Select a category end
press "ENTER" to view,
starting from the last
event in the list
CANCEL ENTER  ▲ ▼
  
```

4

5. Use arrows to browse through the events

```
≡ ≡ ≡ SCAN
----- ON
```

```
EVENT #848 (OLD)
```

```
-----
I0002      30/04/2008
           14:19:20.057
```

```
Parameters were changed.
New set was written to
the flash memory.
```

```
----- CLOSE ▲ ▼
```

5