

## How to perform system test

- From any measuring screen (fig 1) press **F1** (Mode) and use **F4** (up) and **F5** (down) to highlight "Perform System Test" option. Press **F3** (Select) (fig 2), the system will perform a built-in test (indicated by the word "TESTING" on the status line).



Figure 1: measuring screen

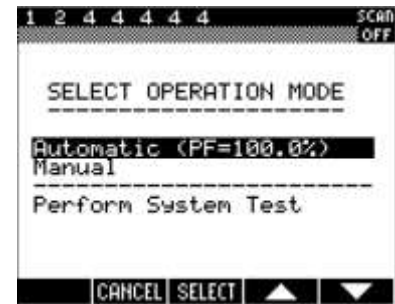


Figure 2: Mode of Operation

- On test completion, a Group Test Report will be displayed (fig 3). Use **F4** (up) and **F5** (down) to highlight the group under test. Press **F3** (Enter), the group details screen will appear (fig 4, 5) verify that the values detected match those expected. In group details screen press **F5** (down) to display back ground readings screen (fig 6). Repeat the test procedure for all other groups.
- Please take a picture or write down the information in these screens and send us the information.



Figure 3: Group Test Report Screen



Figure 4: Group Details Screen - Group OK



Figure 5: Group Details Screen - Group with Error 3

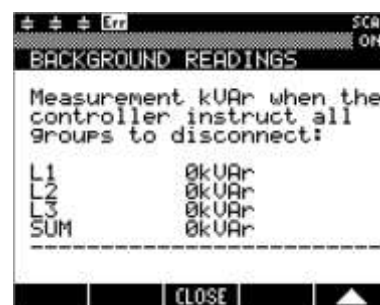


Figure 6: Background Readings